


# SELECT INCREMENTS™ DASH-PODS INSTALLATION

\* Color copies can be printed at [www.selectincrements.com](http://www.selectincrements.com) for better clarity, if necessary.

**Noteworthy:** Pods may come in contact with heater ducts and ducts will flex slightly to accept the pods when they're screwed in place. This was done to maximize mounting diameter and depth in each pod. Also, '97-'00 models may have the driver side pod contact the headlight switch base due to tolerances from the factory, which is also normal and twisting the switch slightly will aide with this; call us if you still have trouble with this switch.


**'02 Wire Plugs:** Some '02 TJ's made late in the model year may have different wire plugs. If the plugs supplied don't connect with the factory dash plugs in your late model '02, call us and we'll be able to get you the correct plugs.

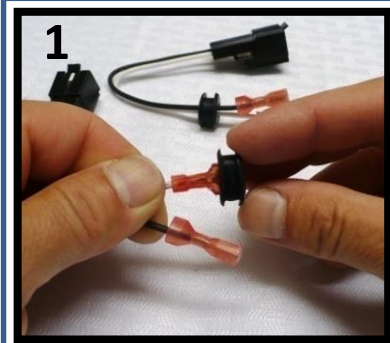


1 Push grommet over each pair of plugs starting with the large spade first. It's a tight fit, but it minimizes hole size.



3 Feed the spade terminals through the 7/16" hole on back of each pod and push grommet into hole.

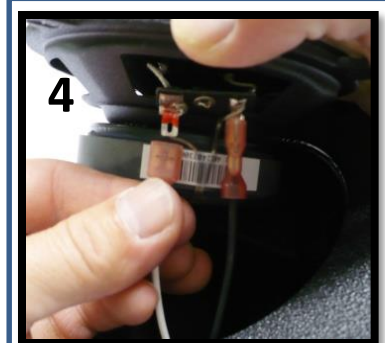

4 Connect spade terminals to speakers.

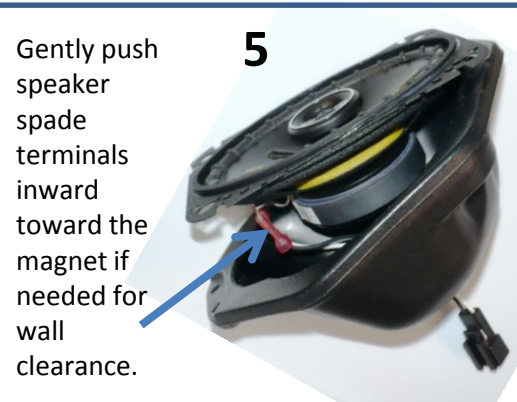

5 Gently push speaker spade terminals inward toward the magnet if needed for wall clearance.



Driver Side


## 6 (only if using 4x6 speakers)

Before you screw the speakers to the pods...


You may need to cut top inner corners of speaker frames to get clearance around the metal bracing of the dash. Only the corners shown here may need to be cut, and possibly just the Driver Side Pod.



Passenger Side

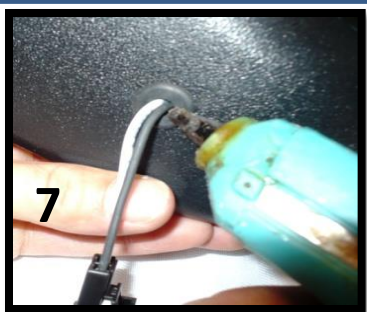

7 Gently pull excess wire from pods. We recommend sealing any air-space around wires with glue gun.

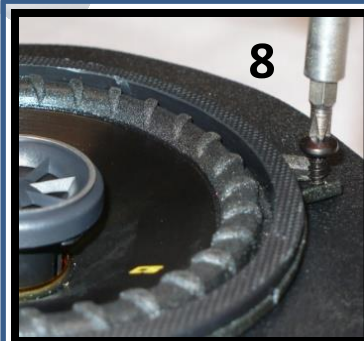

8 Screw speakers to pods with the included #10 X 3/8" screws



9 Remove the speaker covers from your TJ's dash with a Phillips screwdriver, 2 screws per side.




10 Remove foam pieces if your TJ has them.



11

OR

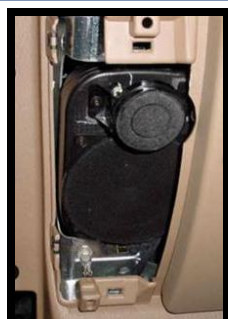


Remove your current dash speakers with a Phillips screwdriver, 4 screws per side. (You will reuse these screws for the pods, so keep them aside). Unplug the speakers from the factory plugs.



12 (Generally '97-'00) If you have these brackets, turn page over. If not, continue to #13.

Plug your DASH-PODS into your existing factory wire harness and reuse the mounting plate screws that held your old speakers in place to mount your DASH-PODS. (It is normal to have the backs of the pods hit and flex the heater ducts in some instances.) Replace the speaker covers and you're done!

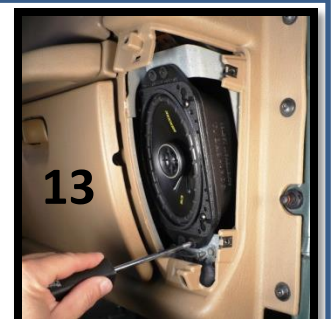

13

[www.selectincrements.com](http://www.selectincrements.com)  
Email: [admin@selectincrements.com](mailto:admin@selectincrements.com)  
Landline: 610-345-9044



'97-'00 models must remove the section of metal bracket on the driver and passenger sides...

The quickest and easiest way to do this is with a good pair of tin snips. There are small notches in the metal that act as perfect starting points for the snips. It takes a little muscle, but good snips can do the job.

Images are of Driver Side, repeat for Passenger Side.



'97-'00 models now check the pods for fitment...may need to use a pair of pliers or vice grips to slightly bend the corners back and away if these points are interfering with the pod(s) installation after making the cuts. Then go to step #13 on other side of page.

There is a video of this on our website and on youtube.com



Select Increments™  
4WD AUDIO

www.selectincrements.com

Email: admin@selectincrements.com

Landline (no texts): 610-345-9044

