Installation Instructions for: **Pivot-PodsTM** For 2018 & up JL Wranglers and 2020 & up JT Gladiators Tools required: -Small plastic pry bar (or Flathead Screwdriver) -Phillips (short) Screwdriver(s) Tools helpful: -Flashlight -Pick-awl



Select Increments®

www.selectincrements.com (T) 610-345-9044 (landline, no texts) Email: admin@selectincrements.com

You can print **color** copies of these sheets on the website if you'd like.

If needed at some point, additional retaining clips as seen in #3 can be found on Ebay under part# 15545202-




These instructions show the passenger side pod. Simply repeat the process in mirror image for the driver-side pod.




Pop off grille cover with plastic pry bar or flathead screwdriver.



Remove speaker screws with short Phillips screwdriver, lift factory speaker and remove connector by pushing in retainer and pulling the connector off.

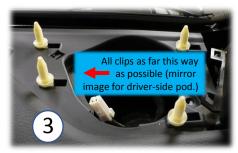

Insert oval bases of included retaining clips and twist ¼ turn to lock them in place, **making sure they are as far <u>toward the center of the Jeep</u> as they can go within those rectangular holes.** Extra clips are included. If you need more at some point, see above.

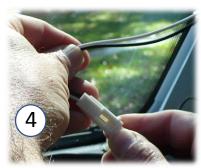

Use included wire connector to mate with factory connector in dash.



Pull connector wires up through pod. Drop pod onto the clips from #3, then push pod down over ribs of retaining clips until pod is fully seated. A flashlight can help in lining up the holes. You can gently bend one or more clips in the direction needed if necessary.



Connect wires to terminals on your new speaker.



Push excess wire through pod and down into dash. Line up speaker to the screw holes and use either the screws that came with your speakers or the stubby black screws we provide if you prefer (recommended).



Line up grille holes to the pre-drilled holes in the pod and screw grille in place. Do the two lower screws first. A pick-awl can help to locate the holes.

Note: When you need to change windshield decals for State Inspections, Parking Permits, etc. you can pull the pods of the retaining clips temporarily. Just be sure the clips are toward the center of the Jeep again (as stated in Step 3) when pushing the pods back down in place.